


# red kite

## IMPORTANT! KEEP FOR FUTURE REFERENCE.

Read the instructions carefully before use and keep them for future reference.  
The child may be hurt if you do not follow the instructions.  
Adult assembly required.

### Instruction Leaflet

### Baby Go Round 3in1 Play Table


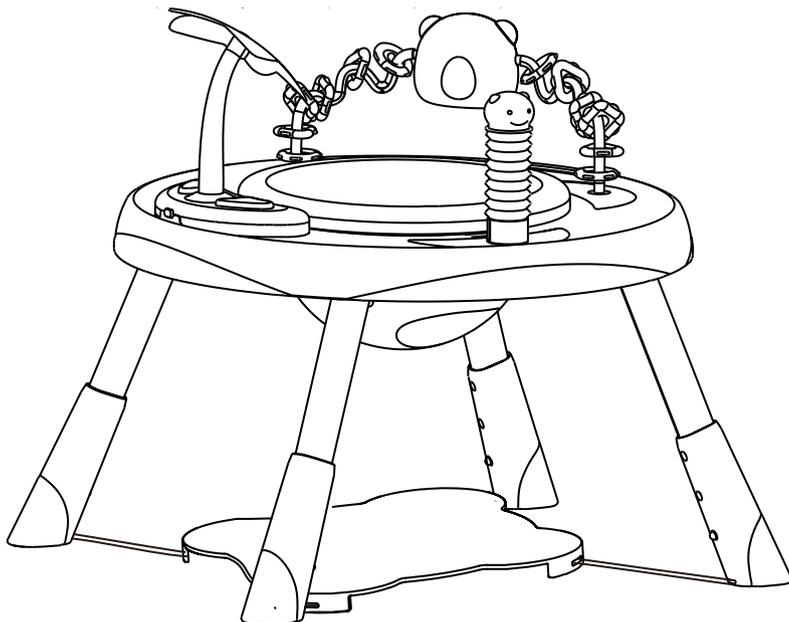


Entertainer Mode: Suitable for a child that can support its head unaided (approximately 6 months), and up to a maximum weight of 12 kg.  
Complies with the relevant parts of BS EN 14036:2003.

Customer Care Line: 01454 326 568.

# Name of Parts



Check all parts are present before assembly.

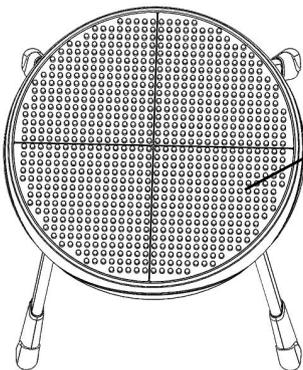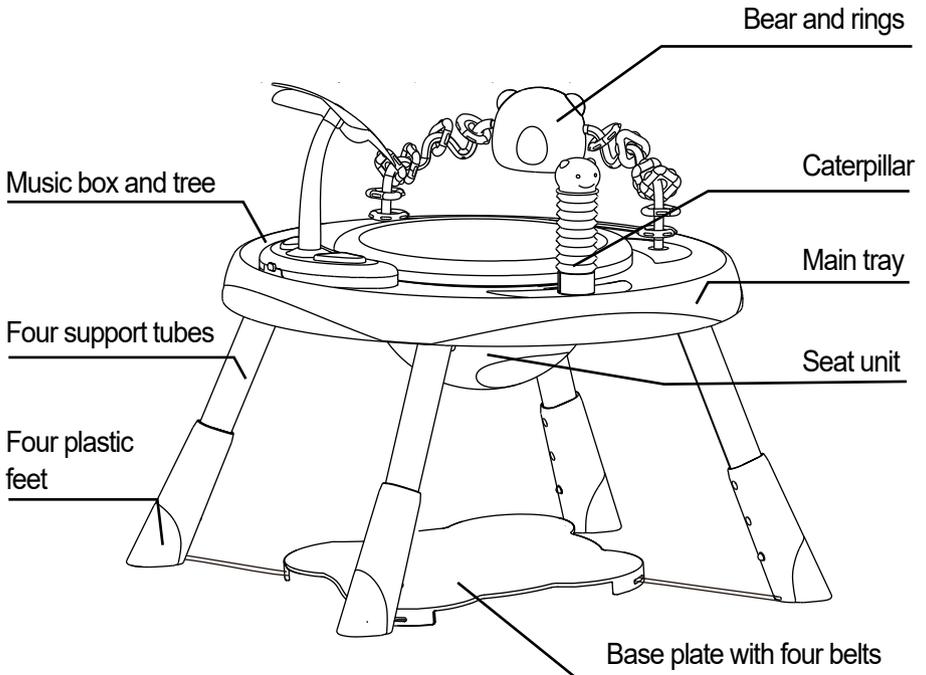

Four building block bases

# ASSEMBLY INSTRUCTION

## Assemble the Support Tubes

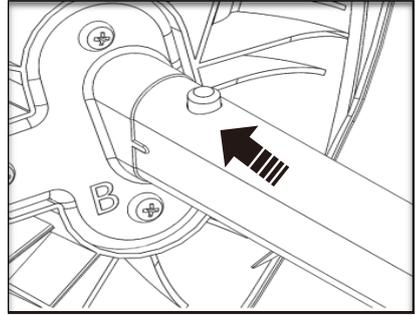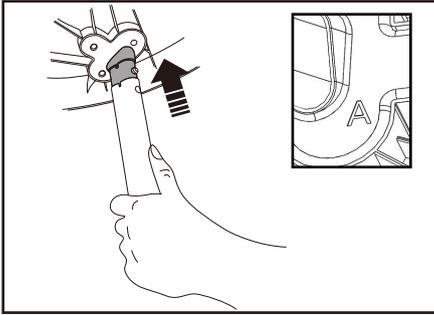

Please note the letters on the plastic parts and the support tubes.

Match the support tube “A” to the plastic part “A”, same for “B” combination. You should hear a “click” and the pin will come out from the hole on the support tube.


Press the pin inward and pull the support tube out to disassemble.

## Assemble the Plastic Feet and Adjust the Height


Insert the support tubes into the plastic feet.

Press the pins to adjust the height of the product,3 in total.

**WARNING!**The four support tubes must be at the same height before use.

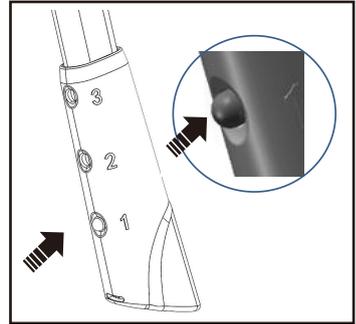





## Assemble the Base Plate

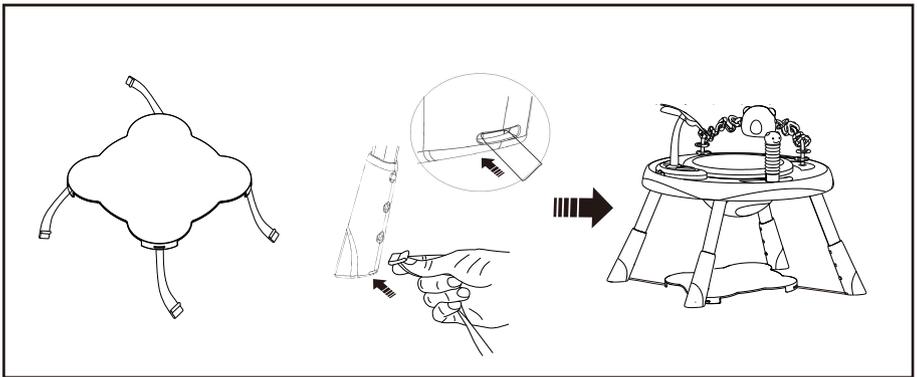

Insert one side of the four belts into the base plate, then insert the other side of the belt into the plastic feet.




Pull the belts and make sure they are fixed in position.

# Assemble the Toys

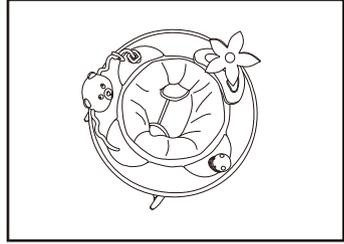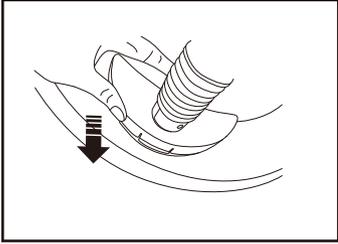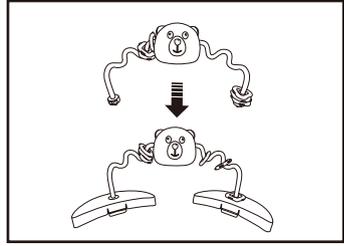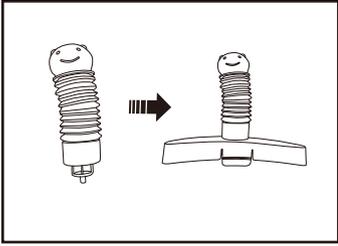

Please make sure the toys are assembled in the correct positions. There will be an audible 'click' when locked in place.

# Music Box Instruction

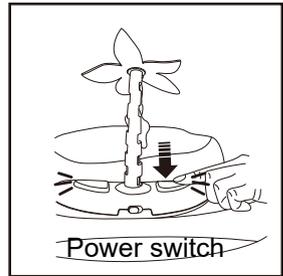
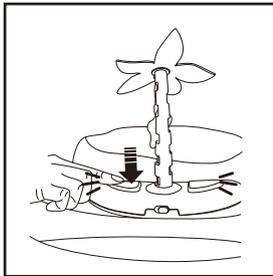
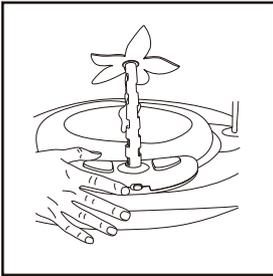


Please make sure the music box is assembled in position, and you should hear a "click".

Press the buttons to change the music.

The Power switch and volume adjustment is located in front of the Palm Tree toy.







# Remove the Music Box and Toys

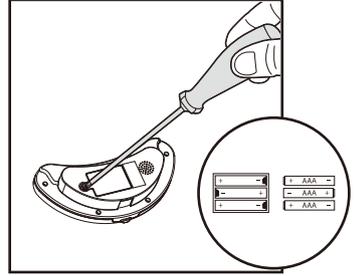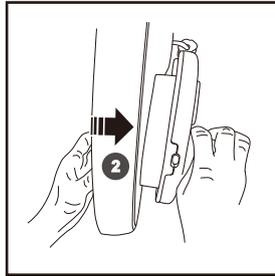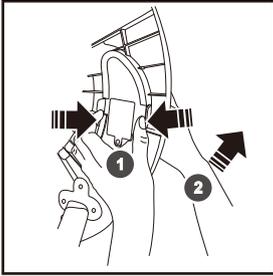

Press the two clips under the music mobile inwards, and pull the music mobile out of the plate. Same steps to remove the other toys.


Use a Philip's head screw driver to remove the screws and change the batteries. Please note the positive and negative anodes of the batteries. Please remove the batteries if you do not use the music box.

# Assemble the Seat Unit

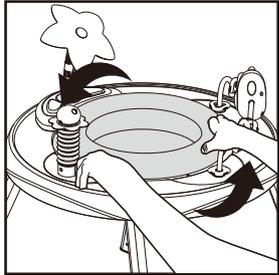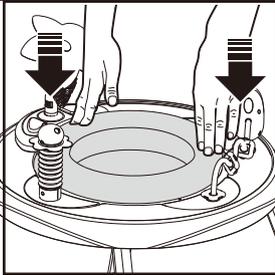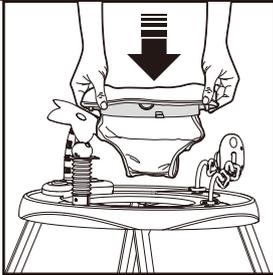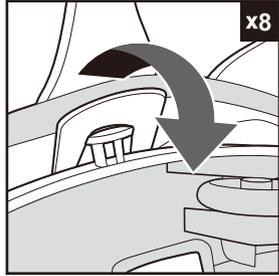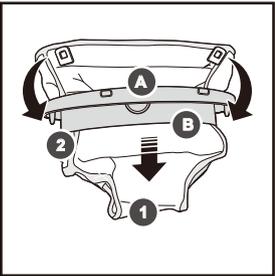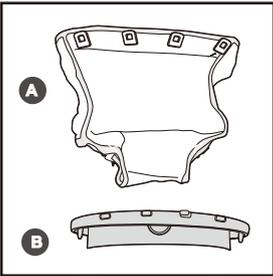


Fix the seat fabric on the plastic ring with the 8 clips. Press the seat unit on the main tray downwards until it clicks in place.

## Entertainer Mode

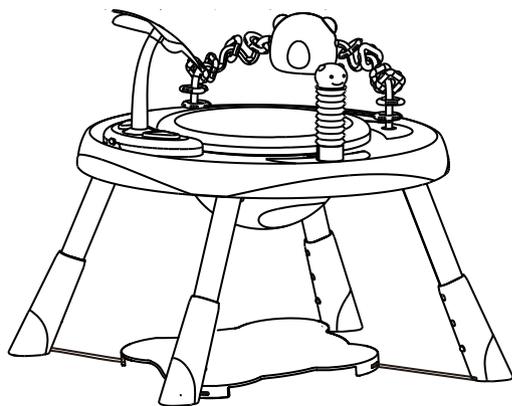


## Table Mode

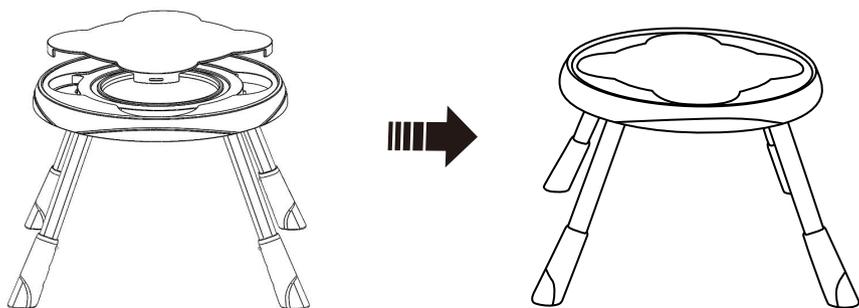

Remove the base plate from the plastic feet and remove the belts. Please keep the belts away from the baby and keep them for future use.

Put the base plate on the main tray and change it to Table Mode.

# Building Block Table Mode

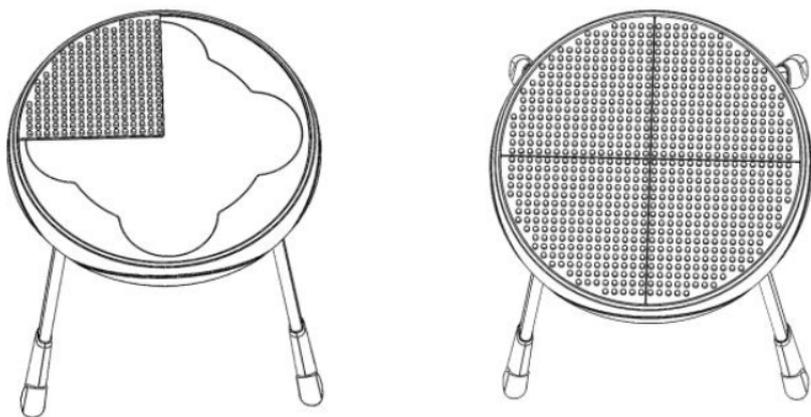

Put the four block bases on the table and change it to building block mode.

# Entertainer Mode

## General Care:

The correct use and maintenance of this product is essential.

Do not use excessive force when adjusting the product.

Always store the product in a dry place.

Individual toys on the toy tray are not replaceable.

Do not alter the toy tray by adding toys or cutting existing ones away, this could be dangerous.

## Cleaning:

The seat unit may be spot cleaned by using a sponge with a mild soap and warm water solution. Leave to dry in a ventilated area away from direct sunlight. Do not dry clean, machine wash, bleach or tumble dry. Do not submerge in water.

Metal parts may be cleaned with a damp cloth. Always wipe dry.

Clean plastic parts with a mild soap and warm water solution.

Avoid leaving the product in direct sunlight for prolonged periods of time as this may cause fabrics to fade.

## Maintenance:

Check that nothing is loose or broken and that no sharp edges have been exposed. Replace any damaged parts immediately.

Routinely inspect all studs, nuts and screws for tightness. Check the seat attachment points, ensure they are secured.

Do not use replacement parts other than those approved by the manufacturer or distributor. Failure to do this may invalidate your warranty.

## Safety Warnings:

### WARNING! NEVER LEAVE THE CHILD UNATTENDED!

This product must be assembled by an adult.

Ensure baby is correctly and safely positioned in the seat.

Suitable for a child that can support its head unaided, and up to a maximum weight of 12 kg.

Not suitable for children who can walk unaided or who weigh more than 12 kg.

Baby should only use the product for a maximum of 20 minutes at a time.

Keep children away from this product during set-up and when not in use.

Do not allow a baby to fall asleep in the product.

Do not attempt to move or lift this product when a baby is in it.

Guard all fires, heating and cooking appliances.

Remove hot liquids, electrical flexes and other hazards from reach.

Strings cords can pose a risk of strangulation. Do not suspend over product or attach strings to toys.

Do not allow other children to play around the product.

Avoid giving baby drinks when in the jumper as leakages and spillages may cause damage the electronic tray.

Do not under any circumstances apply excessive pressure to the top tray.

Older siblings should not be allowed to play with the product whilst the child is in it as this can be dangerous.

For all technical queries please call: 01454 326 568

Imported by: The Red Kite Baby Co Ltd. 35 Lavenham Road, Beeches Industrial Estate, Yate, Bristol, BS37 5QX. UK.