

# red kite

## IMPORTANT

Keep these instructions for future reference. Your child's safety may be affected if you do not follow these instructions.

### Instruction Leaflet

### Push Me Savanna i



Carry Cot Mode



Stroller Mode



Car Seat Mode

Stroller: EN1888-2:2018.

Carry Cot Mode: This product is suitable for a child who cannot sit up unaided, roll over and cannot push itself up (up to 9kg) on its hands and knees. Maximum weight of the child: 9kg.

Stroller Mode: Intended for children from 6 months up to 22kg or 4 years whichever comes first.

Rear Facing Infant Carrier: R129 Universal.  
For infants up to 13kg. Category: 40 - 85 cm.

Customer Care Line: 01454 326 568

## Parts list

1. Main frame with basket
2. Front wheels x2
3. Rear axle/brake unit
4. Rear wheels x2
5. Combined seat unit and carry cot with hood
6. Bumper bar
7. Apron
8. Rain cover
9. Car seat adaptors x2
10. Car seat



## Assembly and usage instructions

### To open the frame

1. To open the frame, release the locking catch and lift the handle upwards until it locks in place. Fig 1.

**WARNING** Ensure that all the locking devices are engaged before use.

### To assemble the front wheels

2. Insert the metal stem of the front wheels into the hole of the wheel holders and push upwards until it clicks in place. Fig 2a.

To select a fixed or swivel wheel, slide the lock to the side. To remove the wheel, push in the button and pull the wheel down. Fig 2b.

**To assemble the rear wheels / brake unit**  
3. Attach the rear axle / brake unit on to the rear legs. Fig 3a.

Ensure the silver push pins are visible through the hole. Fig 3b.

Fig 1



Fig 2a



Fig 2b

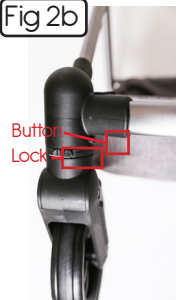


Fig 3a



Fig 3b



Push the stems of the rear wheels into the axle unit until they lock in place. To remove the wheel, pull down on the clip and remove the wheel. Fig 3c.

### To operate the brakes

To operate the brakes, push down with your foot on the rear of the brake pedal and push forward on the front of the pedal to release them. Fig 3d.

**WARNING** Apply all the brakes whenever you park the stroller.

### To attach the seat unit

4. Before attaching the seat unit to the main frame, ensure the metal bar is underneath the Velcro flap. Fig 4a.

Insert the seat unit adaptors into the brackets on each side of the frame and press down. Now, open the seat frame until it is flat and locked in place. Fig 4b.

To remove the seat unit, pull up the catches on both sides of the adaptors and lift upwards. Fig 4c.

### To attach or remove the bumper bar

Insert the ends of the bumper into the holes on top of the seat adaptors and press down until it clicks in place.

To remove the bumper bar, press in the button and lift up. Fig 4d.

Attach the apron to the seat with the zip, fold the end flap around the bumper bar and secure with the elastic toggles. Fig 4e.

### To adjust the seat unit

To adjust the angle of the frame of the seat unit press in the button on the back of seat (just behind the hood). Fig 5a.

To lower only the backrest, squeeze the butterfly clasp on the back of the seat and pull down to desired position.

To raise the backrest, hold the end of the strap squeeze the clasp and push it forward. Fig 5b.

Fig 3c

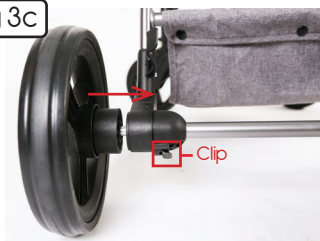


Fig 3d



Fig 4a



Fig 4b



Fig 4c



Fig 4d



Fig 4e



Fig 5a



Fig 5b



## Carry Cot Mode

6. For carry cot mode ensure the seat unit / carry cot frame is reclined to a horizontal position. Ensure that the two buckles on the lower half of the seat are not connected. Fig 6.

NOTE. It is recommended that when in carry cot mode for newborn that the harness is removed. Locate the ends of the harness buckles, turn them sideways and pass them through the slots in the seat unit.

## Stroller Mode

7. To change to Stroller mode, connect the two buckles and raise the seat and frame to desired positions. Fig 7.

## To operate the hood

8. To adjust the hood, simply push or pull the front of the hood backwards or forwards. Fig 8.

## Car Seat Mode

Insert the adaptors into the car seat until they lock in place. Fig 9a.

Insert both of the adaptors of the car seat in to the pushchair frame until it locks in place. Fig 9b.

To remove the car seat and adaptors from the pushchair, lift up the catches on both sides of the adaptors and lift upwards. Fig 9c.

To remove the adaptors from the car seat, press in the grey buttons on the car seat and pull the adaptors downwards. Fig 9d.

Carry Cot Mode



Stroller Mode



Car Seat Mode



## To fold the stroller

10. Ensure the front wheels are selected in swivel mode. Adjust the angle of the seat so the frame is parallel with the main stroller handle. Fig 10a.

Pull the stroller backwards a little so the front wheels are facing backwards.

Slide the button to the side and squeeze the trigger to drop the handle towards the floor. The locking catch will engage automatically. Fig 10b.

Press in the button located on the frame at the bottom of the seat unit and swivel the lower half towards the head. Fig 10c.

Your folded stroller will now look like this. Fig 10d.

NOTE To achieve the optimum storage size, releasing the Velcro on the back of the seat unit (with the bar underneath) allows the seat to be folded more compactly.

## To adjust and secure the harness

11. To adjust and secure the harness  
Slide the shoulder strap (A) on to the waist strap (B) and then push the forked clip in to the central buckle - housing (C). The harness can be made looser or tighter using the sliders on each strap.

To release the buckles simply push the button in the centre of the buckle housing. Fig 11.

WARNING Always use the crotch strap in combination with the waist belt.

Fig 10a



Fig 10b




Fig 10c



Fig 10d



Fig 11

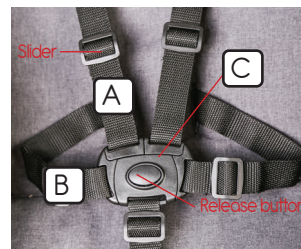

## General care:

- The correct use and maintenance of this stroller is essential.
- Do not use excessive force when folding the stroller.
- If you are having problems, fully open the stroller and repeat the folding procedure.
- Always let wheels down as gently as possible when mounting and dismounting kerbs.
- Always fold the stroller when going up or down stairs.
- Never bump the stroller over these or similar obstacles.
- In some climates mould and mildew can affect the fabric and rain cover. To avoid this, do not fold the stroller when it is wet. Leave it open in a ventilated area until completely dry.
- Always store the stroller in a dry place.
- When storing the stroller in the car, never place other items on top of it.
- Do not exceed the maximum load of 2 kgs in the shopping basket. [Where provided].

## Cleaning:

- Fabric covers and trims may be spot washed using mild detergent and warm water. Leave to dry in a ventilated area away from direct sunlight.
- Avoid leaving your stroller in direct sunlight for prolonged periods of time as this may cause fabrics to fade.
- Do not dry clean, machine wash or tumble dry.
- Metal parts may be cleaned with a damp cloth, wipe dry.
- Clean plastic parts with a mild soap and water solution, wipe dry.

## Maintenance:

- Maintain your stroller by lubricating all metal moving parts with a silicone based spray. Do not use heavy machine oil or grease as this can attract dirt or grit.
- Check that nothing is loose or broken and that no sharp edges have been exposed. Inspect all joints and the harness, replace any damaged parts immediately.
- Inspect any nuts and bolts regularly to ensure none have worked loose. Tighten as necessary.
- Only use replacement parts and accessories that have been approved by the manufacturer. Failure to do this may invalidate your warranty.

## Safety warnings:

- WARNING Never leave your child unattended.
- WARNING To avoid injury ensure your child is kept away when unfolding and folding this product.
- WARNING Do not let your child play with this product.
- WARNING Always use the restraint system.
- WARNING This product is not suitable for running or skating.
- WARNING Your child's safety is your responsibility.
- WARNING Any load attached to the handle affects the stability of the pram / pushchair.
- WARNING Check that the pram body or seat unit attachment devices are correctly engaged before use.
- WARNING Use a harness as soon as your child can sit unaided.
- CARRY COT MODE: WARNING: This product is suitable for a child who cannot sit up by itself, roll over and cannot push itself up on its hands and knees. Maximum weight of the child: 9kg.
- Whilst the product is in Carry Cot Mode, the harness may be removed if desired. Should you choose to use the harness in this mode, the safety guidance must be followed for babies from 0-6 months.
- Removing the Harness for Carry Cot Mode:  
To remove the harness for Carry Cot mode, locate the buckles at the back of the seat and thread each of them through the openings in the hard base and pull through the front of the seat fabric. To reinstall, repeat the process in reverse, and ensure that each harness belt is secured.
- If using the harness in this mode: WARNING! For babies aged 0 - 6 months the harness must be fed through the retaining holes to prevent risk of strangulation.
- For new born babies we recommend using the stroller in Carry Cot Mode as this provides the most reclined seat back position. Never use the detached seat unit [in pram mode] as a carry cot.
- Never change the seat unit into Carry Cot Mode with your child in the seat unit.
- WARNING! When in Carry Cot Mode do not use an additional mattress.

- STROLLER MODE: WARNING: This seat is not suitable for children under 6 months.
  - Not intended for children weighing more than 22kgs.
- This stroller is designed for one child only.
- The brake must always be engaged when placing and removing children from the stroller.
  - Any load attached to the handle and/or on the backrest and/or on the sides of the vehicle will affect the stability of the stroller.
  - Lift a child in and out of the stroller. Do not allow a child to stand on the footrest or seat.
  - Do not use accessories that have not been approved by the manufacturer.
  - Never use the stroller to carry a child up and down stairs or escalators.
  - For newborns, it is advisable to use the seat unit in the fully reclined position.
- CAR SEAT MODE: This vehicle does not replace a cot or a bed. Should your child need to sleep, then it should be placed in a suitable pram body, cot or bed.

## Stroller / Travel System Important Safety Information:

- Seat unit intended for children from birth up to 22 kg. Use in Carry Cot Mode for babies aged 0 – 9 months and in Stroller Mode from 6 months until 22kg or 4 years of age (whichever comes first).
  - This product is supplied with one raincover which fits in Stroller, Carry Cot and Car seat mode. Place the raincover over the unit and secure with Velcro. We recommend allowing the raincover to dry before folding and storing in the basket to prevent mould and mildew forming.
  - A raincover is not supplied for the car seat.
  - Padded liners are supplied with the seat unit and car seat. These can be removed by threading the harness through the slots in the liner.
  - The fixed wheel function makes using the stroller on uneven terrain easier. However, the stroller must never be used on sand as this will severely damage the bearings in the wheels.
  - The height of the shoulder straps can be adjusted by feeding the harness through the cut out holes located on the seat unit.
  - Take extra care in windy conditions.
- Before folding the stroller check the following:
    - A Your child is clear of moving parts
    - B The rear brakes have been applied
    - C The front wheels are secured in the locked mode
    - D The seat unit or car seat has been removed
    - E All items have been removed from the basket
    - F Never attempt to close or fold the stroller with the child inside

EN1888-2:2018

For all technical queries please call: 01454 326 568

Manufactured by: The Red Kite Baby Co Ltd, 35 Lavenham Road, Beeches Industrial Estate, Yate, Bristol, BS37 5QX. UK