



IMPORTANT

Read these instructions carefully before use and keep them for future reference. Your child's safety may be affected if you do not follow these instructions.

Instruction leaflet

Push Me 2U




This vehicle is intended for children from 6 months up to a maximum weight of 15kgs.

Complies with BS EN 1888 : 2012

Customer Care Line: 01454 326 568

Fig1.

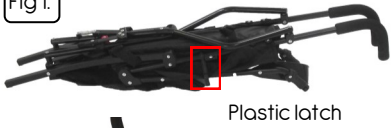

Plastic latch


Fig2.



Open

Closed

Fig3.

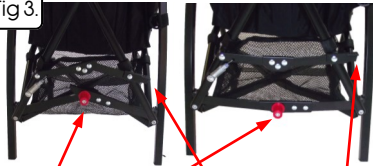

Primary lock

Secondary lock

Fig4.




"Click"

FRONT

REAR

Fig5a.

- 1. Lift up
- 2. Push down

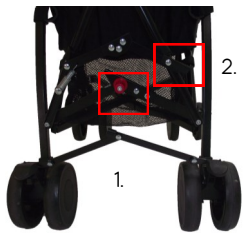


1.

Fig5b.

Push handles down



Fig6.

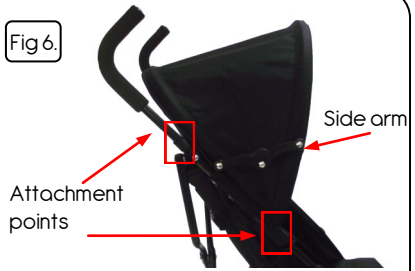

Side arm

Attachment points

Fig7.



Buckle

Fig8.

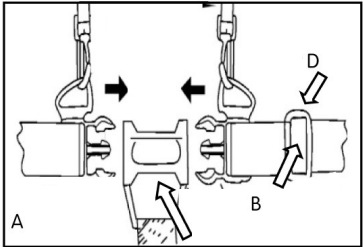


Fig9.



Brake levers

Fig10.



Tab

Assembly Instructions

To open and unfold the frame

1. Hold the buggy in an upright position with the front legs facing away from you. Release the plastic latch on the side of the frame. Fig 1.
2. Grasp the handles and push the front part of the buggy away from you. Pull the handles up and out until the buggy is in an upright position. Fig 2.
3. Push the primary lock down. The secondary safety lock will engage automatically. Fig 3. Fig 3a.

WARNING Ensure that all the locking devices are engaged before use.

To attach the front and rear wheels

4. Ensure the swivel lock is on the top of the wheel unit and push it onto the wheel holder on the bottom of the leg tube, you will hear it click into place when correctly fitted. When assembling the front wheels, ensure the swivel lock is on the TOP of the unit. Ensuring the brake pedals are facing away from the stroller, push the rear legs in to the rear wheel housing until they clip in place and the push pin has come through the hole. Pull on the wheel units to make sure they are properly attached.

Fig 4.

To close

5. Retract the hood. Engage the brakes. Release the primary lock by placing your foot in the centre and then lift upwards. Now push down on the secondary lock with your foot (Fig 5a) and push the handles in a forward motion (Fig 5b).

Accessories

A raincover is supplied with this stroller. The raincover should be placed over the hood and folded then placed in the basket when not in use.

To attach and operate the canopy

6. Attach the canopy to the stroller using the clips and Velcro. The To retract, lift the side arms and pull the canopy back. Fig 6.

Using the reclined seat feature

7. To select the lie back position, undo the buckle by squeezing the tabs together. To select the upright position connect the buckle. Fig 7.

To adjust and secure the harness

8. To secure your child in the harness, push the buckle prongs (A) + (B) in to the buckle housing (C) until they snap into position. Adjust slider (D) to ensure a snug fit for your child. Repeat for the other side and also for the shoulder straps. After making adjustments to the seat always re adjust the harness. Fig 8.

WARNING Always use the crotch strap in combination with the waist belt.

To use the brakes

9. Step down on the rear brake levers on either side to engage the brakes. Push the brake levers forward to release the brakes. Fig 9.

WARNING Apply all the brakes whenever you park the stroller.

Operating the swivel wheels

10. Locate the tab on the front of the wheel unit where it meets the frame. Push the tab down to unlock the wheel into a swivel position or lift the tab up to choose the fixed option.

Fig 10.

General care:

The correct use and maintenance of this stroller is essential. Do not use excessive force when folding the stroller. If you are having problems, fully open the stroller and repeat the folding procedure.

Always let wheels down as gently as possible when mounting and dismounting kerbs.

Always fold the stroller when going up or down stairs. Never bump the buggy over these or similar obstacles.

In some climates mould and mildew can affect the fabric and rain cover.

To avoid this, do not fold the stroller when it is wet. Leave it open in a ventilated area until completely dry.

Always store the stroller in a dry place.

When storing the stroller in the car, never place other items on top of it. Do not exceed the maximum load of 2 kgs in the shopping basket.

Cleaning:

Fabric covers and trims may be spot washed using mild detergent and warm water. Leave to dry in a ventilated area away from direct sunlight. Avoid leaving your buggy in direct sunlight for prolonged periods of time as this may cause fabrics to fade.

Do not dry clean, machine wash or tumble dry.

Metal parts may be cleaned with a damp cloth. Always wipe dry. Clean plastic parts with a mild soap and water solution, wipe dry.

Maintenance:

Maintain your stroller by lubricating all metal moving parts with a light machine oil e.g. WD-40. Do not use heavy machine oil or grease as this can attract dirt or grit.

Check that nothing is loose or broken and that no sharp edges have been exposed. Inspect all joints and the harness, replace any damaged parts immediately.

Inspect any nuts and bolts regularly to ensure none have worked loose. Tighten as necessary.

Only use replacement parts and accessories that have been approved by the manufacturer. Failure to do this may invalidate your warranty.

Safety warnings:

WARNING Never leave your child unattended.

WARNING To avoid injury ensure your child is kept away when unfolding and folding this product.

WARNING Do not let your child play with this product.

WARNING Always use the restraint system.

WARNING This product is not suitable for running or skating.

WARNING Your child's safety is your responsibility.

WARNING Any load attached to the handle affects the stability of the pram / pushchair.

WARNING This seat is not suitable for children under 6 months.

Not intended for children weighing more than 15kgs. This stroller is designed for one child only.

The brake must always be engaged when placing and removing children from the stroller.

Any load attached to the handle and/or on the backrest and/or on the sides of the vehicle will affect the stability of the stroller.

Lift a child in and out of the stroller. Do not allow a child to stand on the footrest or seat.

Do not use accessories that have not been approved by the manufacturer.

Never use the buggy to carry a child up and down stairs or escalators. NOTE D rings have been provided for the attachment of a separate safety harness approved to BS 6684 (if required). The points for attachment are located on the waist straps of the harness.

This product complies with BS EN 1888 : 2012

For all technical queries please call: 01454 326 568.

Imported by: The Red Kite Baby Co Ltd, 35 Lovensham Road, Beeches Industrial Estate, Yate, Bristol, BS37 5QX.