 


red kite

IMPORTANT

Keep these instructions for future reference. Your child's safety may be affected if you do not follow these instructions.

Instruction Leaflet Push Me Astro

 
 
 
 
 
 
 
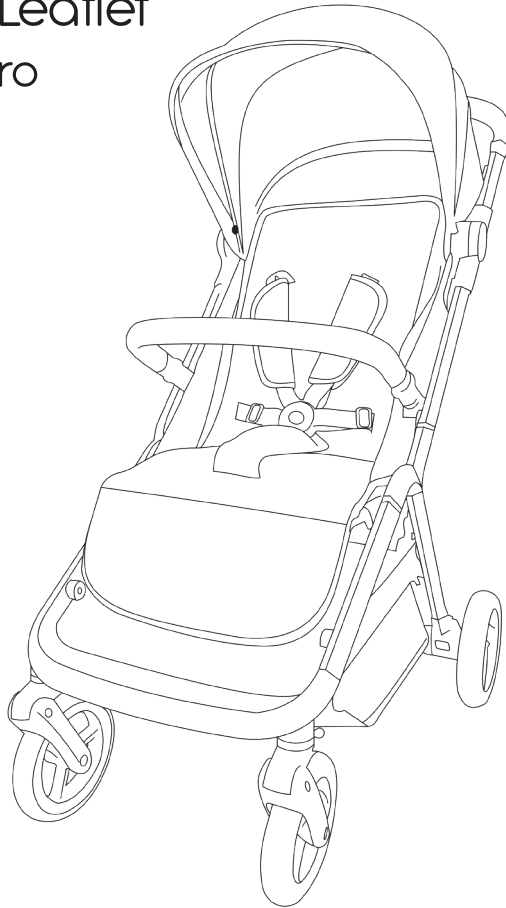 


 
 
 
 
 
 
 
 
 
 
 
This vehicle is intended for children from birth and up to 22 Kg or 4 years whichever comes first.

 
 
 
 
 
 
 
Stroller: EN 1888-2:2018+A1:2022

Customer Care: www.redkitebaby.com

Parts List

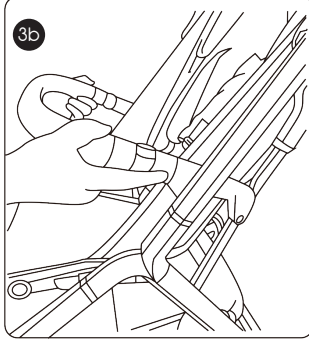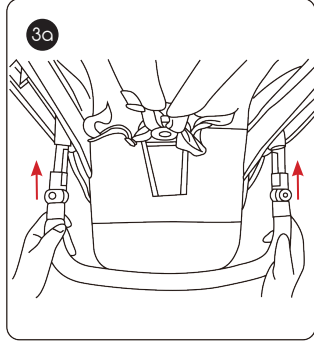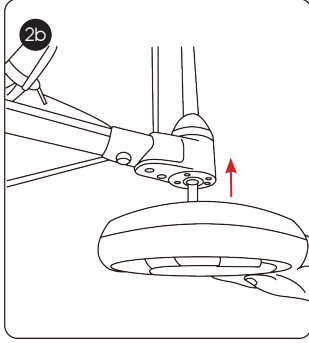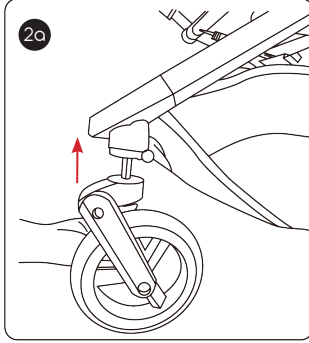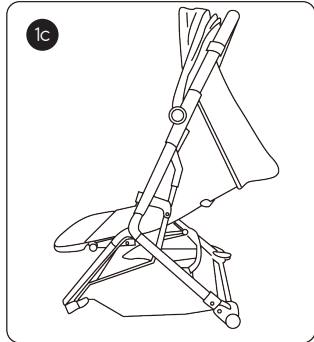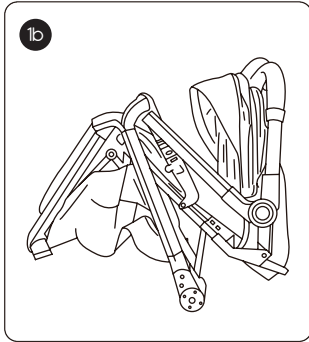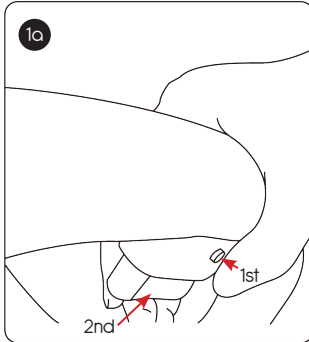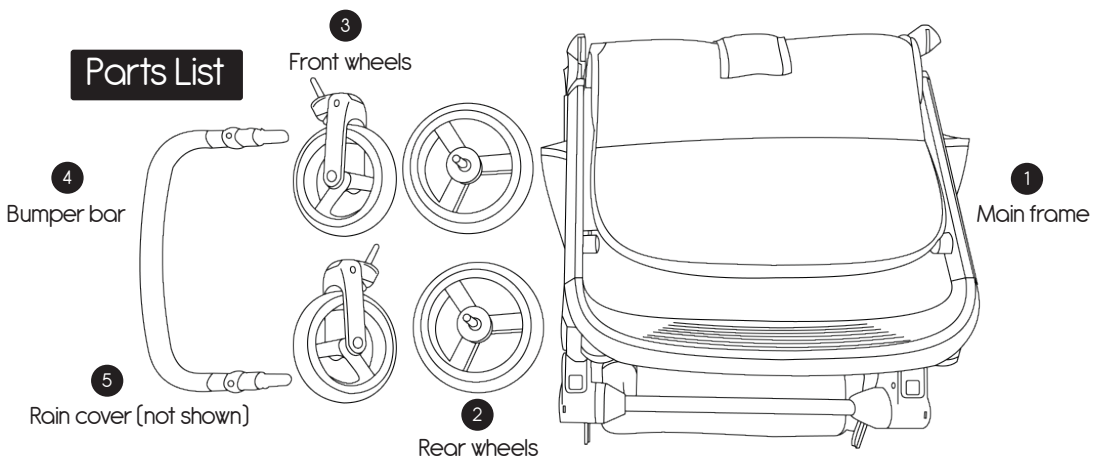

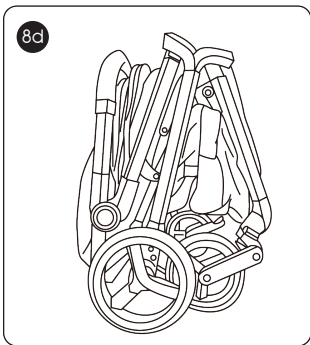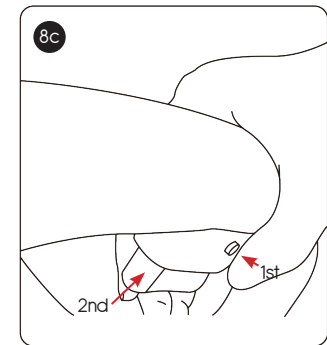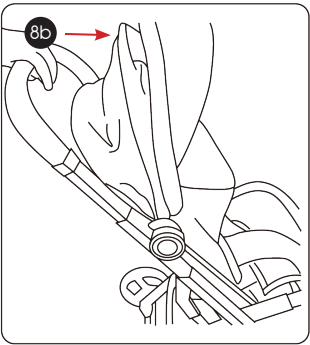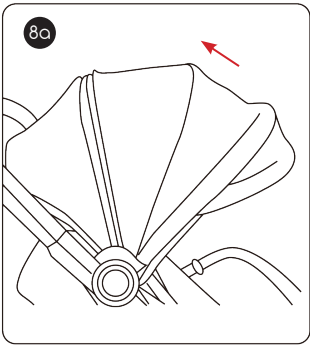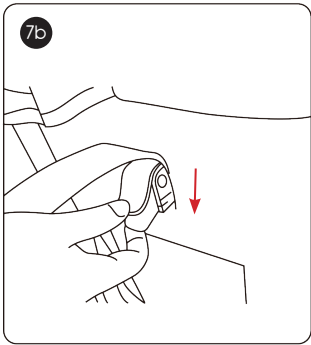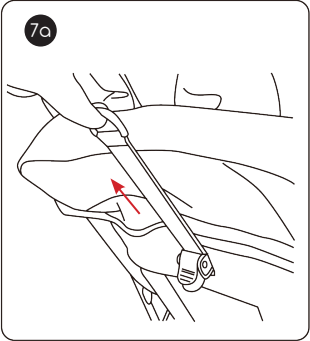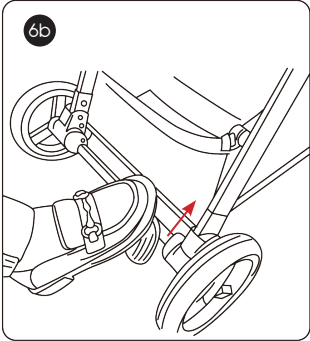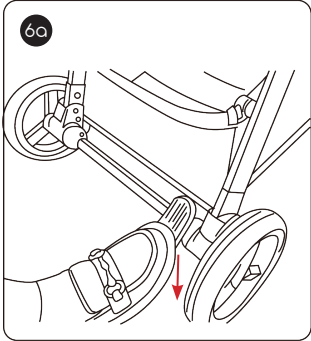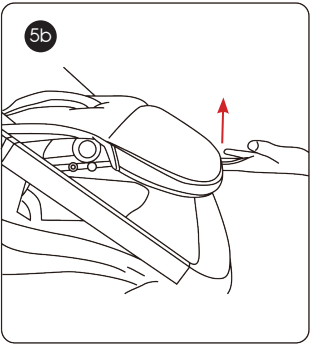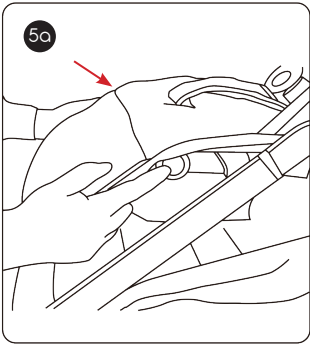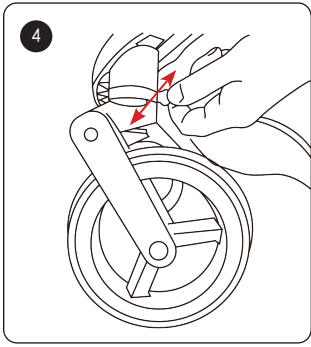

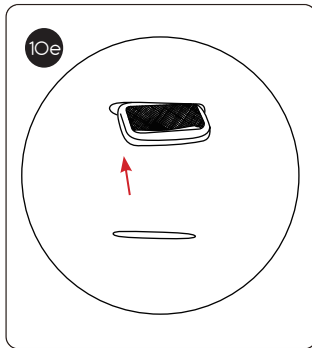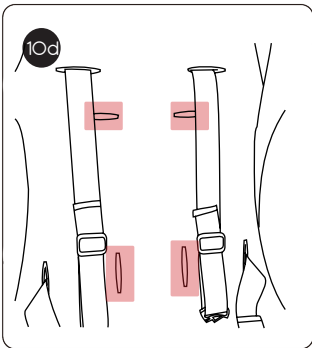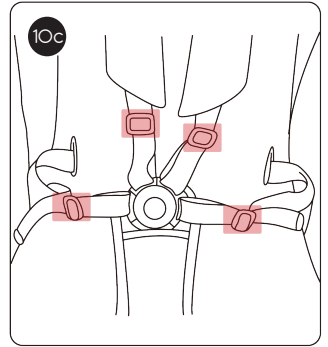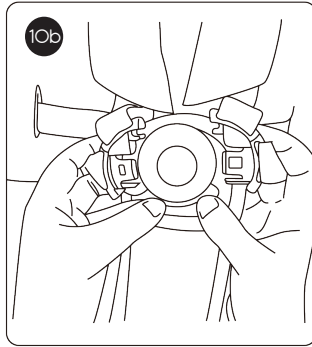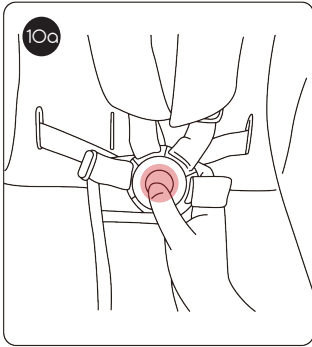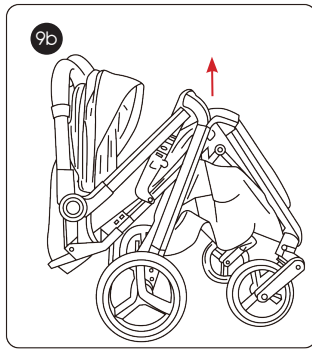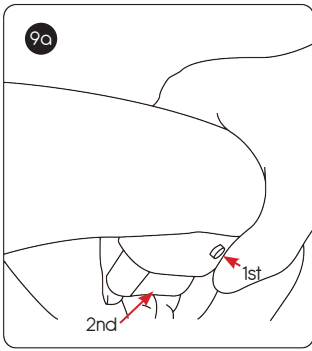

ASSEMBLY AND USAGE

1. To open the chassis

- a. Open the frame by pressing in the small button on the handle, keep it held in and then squeeze the large trigger on the handle.
- b. Lift upwards in a smooth movement until the frame locks in place.
- c. Complete.

WARNING Ensure that all the locking devices are engaged before use.

2. To attach the wheels

- a. Insert the metal stems of the front wheels into the space on the bottom of the front wheel holders and push upwards until they click in place.
- b. Insert the metal stems of the rear wheels into the space on the rear axle/brake unit and push inwards until it clicks in place.

3. To attach the bumper bar

- a. Insert the ends of the bumper bar into the brackets until they click in place.
- b. The bar can be removed by pressing in the small buttons and pulling the bar out.

4. To operate the steering locks

To select a fixed or swivel front wheel, slide the lever to the side.

5. To adjust the calf support

- a. To adjust the calf rest, press in the buttons on both sides and swivel the end of the seat to the required position.
- b. The calf rest can be raised and lowered.

6. To operate the brake

- a. Press down on the brake pedal to engage the brakes.
- b. Push forward on the pedal to release the brakes.

WARNING Apply all the brakes whenever you park the stroller.

7. To adjust the seat

- a. To raise the seat, hold the end of the strap and pull upwards to the required position.
- b. To recline the seat, squeeze the trigger on the back of the seat unit and pull backwards to the desired position.

8. To fold the stroller

- 8a. Retract the hood and raise the seat unit to the upright position.
- 8b. Engage the brakes. Push forward on the handle slightly to ensure the brakes are fully engaged.
- 8c. Press in the small button on the handle, keep it held in and then squeeze the large trigger on the handle.
- 8d. As soon as the frame starts to fold, push forwards slightly and the stroller will completely fold and lock together.

9. To unfold the stroller

- a. Open the stroller by pressing in the small button on the handle, keep in held in and then squeeze the large trigger on the handle.
- b. Lift upwards in a smooth movement until the frame locks in place.
- c. Complete.

10. To secure and adjust the harness

- a. First release the harness by pressing firmly on the centre button.
- b. After placing the child in the seat, slot together both straps and push into the central buckle.
- c. Use the sliders to adjust as necessary.
- 10d. Ensure you choose the correct harness strap position according to the age of your child.
- 10e. To select a different position, undo the Velcro flap on the back of the seat, slide your hand inside the cover and thread the buckle end of the strap through the slot in the hard seat back. Reposition the strap and ensure you turn the buckle so it sits flat against the hard seat back.

WARNING! For babies aged 0 – 6 months the harness must be fed through the lowest holes to prevent risk of strangulation.

WARNING Always use the crotch strap in combination with the waist belt..

11. To attach the raincover

Place the rain cover over the top of the pram and secure it to the frame with the Velcro tabs. (Not shown).

General care:

- The correct use and maintenance of this stroller is essential.
- Do not use excessive force when folding the stroller.
- If you are having problems, fully open the stroller and repeat the folding procedure.
- Always let wheels down as gently as possible when mounting and dismounting kerbs.
- Always fold the stroller when going up or down stairs.
- Never bump the stroller over these or similar obstacles.
- In some climates mould and mildew can affect the fabric and rain cover. To avoid this, do not fold the stroller when it is wet. Leave it open in a ventilated area until completely dry.
- Always store the stroller in a dry place.
- When storing the stroller in the car, never place other items on top of it.
- Do not exceed the maximum load of 2 kgs in the shopping basket. (Where provided).

Cleaning:

- Fabric covers and trims may be spot washed using mild detergent and warm water. Leave to dry in a ventilated area away from direct sunlight.
- Avoid leaving your stroller in direct sunlight for prolonged periods of time as this may cause fabrics to fade.
- Do not dry clean, machine wash or tumble dry.
- Metal parts may be cleaned with a damp cloth.
- Always wipe dry. Clean plastic parts with a mild soap and water solution, wipe dry.

Maintenance:

- Maintain your stroller by lubricating all metal moving parts with a silicone based spray. Do not use heavy machine oil or grease as this can attract dirt or grit.
- Check that nothing is loose or broken and that no sharp edges have been exposed. Inspect all joints and the harness, replace any damaged parts immediately.
- Inspect any nuts and bolts regularly to ensure none have worked loose. Tighten as necessary.
- Only use replacement parts and accessories that have been approved by the manufacturer.

Failure to do this may invalidate your warranty.

Safety warnings:

- **WARNING** Never leave your child unattended.
- **WARNING** To avoid injury ensure your child is kept away when unfolding and folding this product.
- **WARNING** Do not let your child play with this product.
- **WARNING** Always use the restraint system.
- **WARNING** This product is not suitable for running or skating.
- **WARNING** Your child's safety is your responsibility.
- **WARNING** Any load attached to the handle affects the stability of the pram / pushchair.
- **WARNING!** For babies aged 0 – 6 months the harness must be fed through the lowest holes to prevent risk of strangulation.
- For newborns, it is safest to use the seat unit in the fully reclined position.
- This stroller is designed for and to be used by one child only.
- Always engage the brakes when placing children in and removing from the stroller.
- Before folding the stroller check the following:
 - A Your child is clear of moving parts
 - B The rear brakes have been applied
 - C The front wheels are secured in the locked mode
 - D The seat unit or car seat has been removed
 - E All items have been removed from the basket
 - F Never attempt to close or fold the stroller with the child inside

Customer Care: www.redkitebaby.com

Manufactured by: The Red Kite Baby Co Ltd, 35 Lovenham Road, Beeches Industrial Estate, Yate, Bristol, BS37 5QX. UK

Authorised Representative: Mum n Me. Triq is-Suq, Zejtun, ZTN1420. Malta

