



IMPORTANT

Keep these instructions for future reference. Your child's safety may be affected if you do not follow these instructions.

Instruction Leaflet

Push Me Savanna



Pram Mode



Stroller Mode



Car Seat Mode

Stroller: This vehicle is suitable (up to 22 kg or 4 years (whichever comes first))

Complies with BS EN 1888 – 1 & 2 : 2018

Group O Rear Facing Infant Carrier: For infants up to 13kg (Group O+).

Conforms to ECE R44.04 Universal.

Customer Care Line: 01454 326 568

Parts list

1. Frame
2. Front wheels x 2
3. Rear wheels x 2
4. Combined seat unit / carry cot
5. Bumper bar
6. Apron
7. Car Seat
8. Car seat adaptors x 2
9. Raincover (not shown)



Assembly instructions

To open the chassis

1. Pull the locking catch to the side and lift the handle upwards until it clicks in place. Fig 1

WARNING Ensure that all the locking devices are engaged before use.

To assemble the front wheels

2. Insert the metal stem of the front wheel unit in to the wheel holder and push upwards until it clicks in place. Fig 2

To assemble the rear wheels

3. Insert the metal spindle of the rear wheel in to the rear axle/break unit and push inwards until it clicks in place. Fig 3

To attach the seat unit

4. Insert the brackets on the seat unit in to the joints on the frame of the pushchair until they click in place. Fig 4

NOTE. Before first use, ensure the metal bar on the back of the seat unit has the flap of material wrapped around it and is fastened with the Velcro tabs. Fig 4a

Fig 1



Fig 2

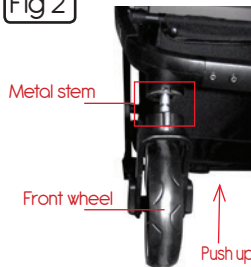


Fig 3



Fig 4



Fig 4a



5. Insert the bumper bar in to the joints on top the seat frame until it clicks in place. Fig 5

6. Attach the apron to the seat with the zip and wrap the top edge of the apron around the bumper bar and secure with the Velcro. Fig 6

Usage instructions

To operate the swivel wheels

7. To select swivel front wheels, push the button on the front of the wheel unit down. For fixed wheels, push the button up. Fig 7

To remove the front wheels

8. Push the button on the back of the front wheel unit and pull downwards to remove them. Fig 8

To remove the rear wheels

9. To remove the rear wheels, push in the button and pull the wheel unit out. Fig 9

To operate the brakes

10. Push downwards on the back of the pedal to engage the brakes. Fig 10

WARNING Apply all the brakes whenever you park the stroller.

Fig 5



Fig 6



Fig 7



Fig 8



Fig 9

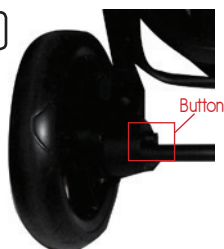


Fig 10



To adjust the handle height

11. To select a different handle height, push in the buttons on both sides and adjust as required.

Fig 11

Fig 11



To use in carry cot mode

12. To use in carry cot mode, push in the buttons of both sides of the unit and swivel the unit until it lies horizontal. Fig 12. Ensure all three straps on the bottom section are undone and the upper seat recline strap has been lowered by pinching the clip and pulling downwards. Fig 12

Fig 12



To operate the hood

13. To operate the hood, pull it forward by the metal bar. There is also a sun visor tucked inside the front rim of the hood which can be simply pulled out when needed. Fig 13

Fig 13



To change direction of the seat / carry cot unit

14. To reverse the direction of the carry cot / seat unit, push in the small buttons and lift the unit off the frame, turn and reattach. Fig 14

Fig 14



To use in seat unit mode

15. For toddler mode, press in the buttons on both sides of the unit and swivel the unit to the desired position. For different leg positions, connect the buckles on the bottom section together. The seat back can be further adjusted by adjusting the strap on the top back of the seat unit. To raise the back of the seat, hold the loose end of the strap and then pinch the clip and push forward. Fig 15

Fig 15



To fold the stroller

16. To fold the stroller, first remove the seat unit. Push in the small primary lock button on the right hand side of the frame and then pull both secondary levers and lower the handle towards the ground. Push the handle towards the rear wheels will engage the locking catch automatically. Fig 16

To attach the car seat adaptors to the car seat

Insert the adaptors in to the bottom of the handle section on the car seat until they click in place.

NOTE

Pay particular attention to the direction the buttons are facing. The lower buttons should be facing towards the BACK of the car seat.

To remove the adaptors from the car seat, push in the upper button and pull the adaptors out. Fig 17

To attach the car seat to the stroller
Slot the adaptors of the car seat in to the frame of the pushchair until they click in place. Fig 18

To remove the car seat from the stroller

To remove the car seat and adaptors from the frame, push in the lower button and lift the car seat up. Fig 19

To adjust and secure the harness

To adjust and secure the harness

Clip the shoulder strap (A) on to the waist strap (B) and then push in to the central buckle housing (C). The harness can be made looser or tighter using the sliders on each strap. To release the buckles simply push the button in the centre of the buckle housing.

WARNING Always use the crotch strap in combination with the waist belt.

Fig 16




Fig 17



Fig 18



Fig 19

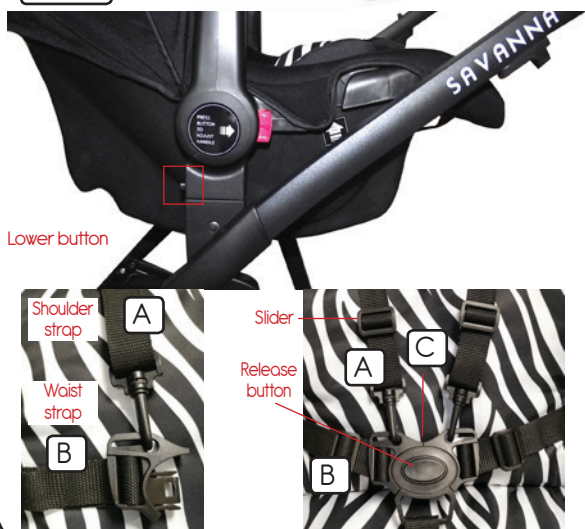

General care:

- The correct use and maintenance of this stroller is essential.
- Do not use excessive force when folding the stroller.
- If you are having problems, fully open the stroller and repeat the folding procedure.
- Always let wheels down as gently as possible when mounting and dismounting kerbs.
- Always fold the stroller when going up or down stairs.
- Never bump the stroller over these or similar obstacles.
- In some climates mould and mildew can affect the fabric and rain cover. To avoid this, do not fold the stroller when it is wet. Leave it open in a ventilated area until completely dry.
- Always store the stroller in a dry place.
- When storing the stroller in the car, never place other items on top of it.
- Do not exceed the maximum load of 2 kgs in the shopping basket. (Where provided).

Cleaning:

- Fabric covers and trims may be spot washed using mild detergent and warm water. Leave to dry in a ventilated area away from direct sunlight.
- Avoid leaving your stroller in direct sunlight for prolonged periods of time as this may cause fabrics to fade.
- Do not dry clean, machine wash or tumble dry.
- Metal parts may be cleaned with a damp cloth.
- Always wipe dry. Clean plastic parts with a mild soap and water solution, wipe dry.

Maintenance:

- Maintain your stroller by lubricating all metal moving parts with a silicone based spray. Do not use heavy machine oil or grease as this can attract dirt or grit.
- Check that nothing is loose or broken and that no sharp edges have been exposed. Inspect all joints and the harness, replace any damaged parts immediately.
- Inspect any nuts and bolts regularly to ensure none have worked loose. Tighten as necessary.
- Only use replacement parts and accessories that have been approved by the manufacturer. Failure to do this may invalidate your warranty.

Safety warnings:

- WARNING Never leave your child unattended.
- WARNING To avoid injury ensure your child is kept away when unfolding and folding this product.
- WARNING Do not let your child play with this product.
- WARNING Always use the restraint system.
- WARNING This product is not suitable for running or skating.
- WARNING Your child's safety is your responsibility.
- WARNING Any load attached to the handle affects the stability of the pram / pushchair.
- WARNING Check that the pram body or seat unit attachment devices are correctly engaged before use.
- WARNING Use a harness as soon as your child can sit unaided.
 - PRAM MODE: WARNING: This product is suitable for a child who cannot sit up by itself, roll over and cannot push itself up on its hands and knees. Maximum weight of the child: 9kg.
 - Not intended for children weighing more than 22kgs. This stroller is designed for one child only.
 - The brake must always be engaged when placing and removing children from the stroller.
 - Any load attached to the handle and/or on the backrest and/or on the sides of the vehicle will affect the stability of the stroller.
 - Lift a child in and out of the stroller. Do not allow a child to stand on the footrest or seat.
 - Do not use accessories that have not been approved by the manufacturer.
 - Never use the stroller to carry a child up and down stairs or escalators.
 - For newborns, it is advisable to use the seat unit in the fully reclined position.

This product complies with BS EN 1888 – 1 & 2 : 2018
For all technical queries please call: 01454 326 568

Imported by: The Red Kite Baby Co Ltd, 35 Lavenham Road, Beeches Industrial Estate, Yate, Bristol, BS37 5QX

Stroller / Travel System Important Safety Information:

- The stroller will not fold down with the car seat or seat unit attached.
- For new born babies we recommend using the stroller in Pram mode as this provides the most reclined seat back position.
- Seat unit intended for children from birth up to 22 kg. Use in pram mode for babies aged 0 – 9 months and in stroller mode from 6 months until 22kg or 4 years of age (whichever comes first).
- This product is supplied with one raincover which fits the stroller in stroller, pram and car seat mode. Place the raincover over the unit and secure with Velcro. We recommend allowing the raincover to dry before folding and storing in the basket to prevent mould and mildew forming.
- A raincover is not supplied for the car seat.
- Padded liners are supplied with the seat unit and car seat. These can be removed by threading the harness through the slots in the liner.
- The fixed wheel function makes using the stroller on uneven terrain easier. However, the stroller must never be used on sand as this will severely damage the bearings in the wheels.
- The height of the shoulder straps can be adjusted by feeding the harness through the cut out holes located on the seat unit.
- **WARNING!** For babies aged 0 – 6 months the harness must be fed through the retaining holes to prevent risk of strangulation.
- Never use the detached seat unit (in pram mode) as a carry cot.
- Never change the seat unit into pram mode with your child in the seat unit.
- **WARNING!** When in pram mode, do not use an additional mattress.
- Take extra care in windy conditions.
- Before folding the stroller check the following:
 - A Your child is clear of moving parts
 - B The rear brakes have been applied
 - C The front wheels are secured in the locked mode
 - D The seat unit or car seat has been removed
 - E All items have been removed from the basket
 - F Never attempt to close or fold the stroller with the child inside