 
 



PARTS LIST

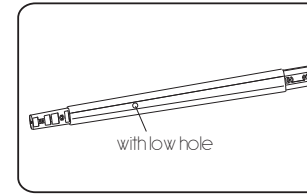


Long leg x2

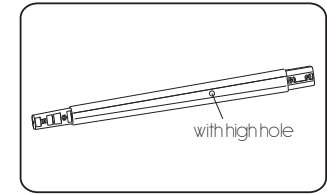

 
Long leg x2

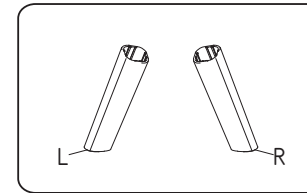


Long plastic foot cover x2

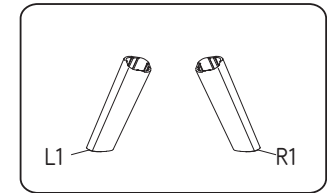 


Short plastic foot cover x2

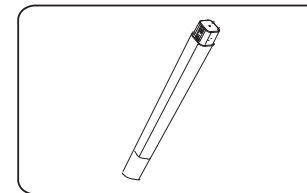 


Short leg x4

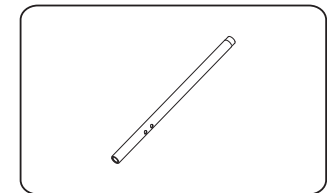 


Side frame to chair x2

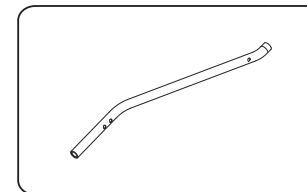 


Side frame x2

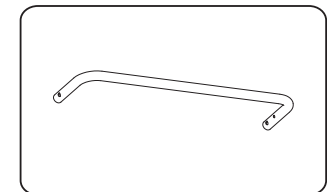 

Rear frame for highchair x1

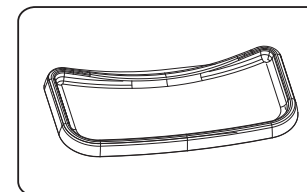 


Tray (including flexi feeding tray) x1

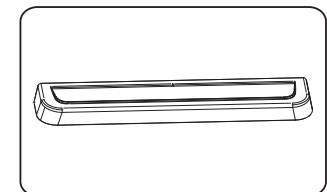 


Footrest x1

 
PARTS LIST

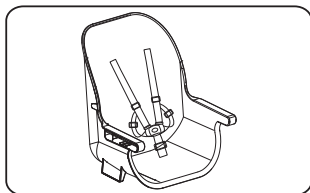


Seat cover and back rest x1

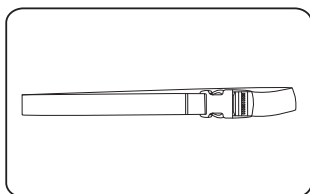 


Belts for booster x2

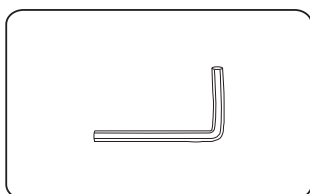 


Allen key x1

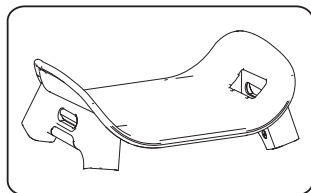 

Seat Panel x1

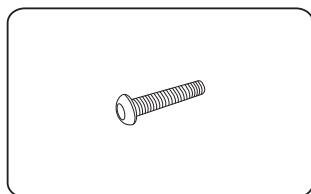 


Screw x4

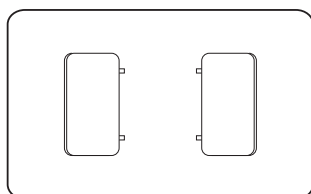 


Seat panel cap x2

 4 IN 1 MODE OPTIONS

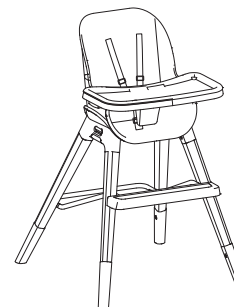


High Chair

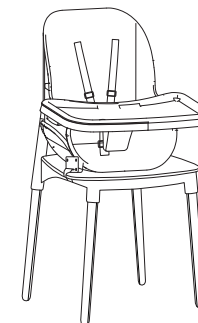 

Booster




 
Lo Chair

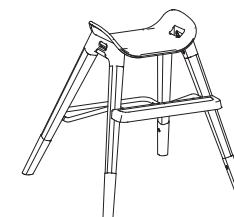


Stool

INSTRUCTIONS FOR HIGHCHAIR ASSEMBLY

  
1

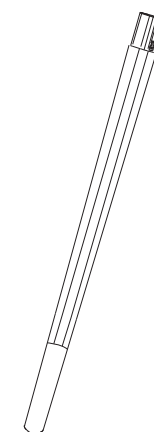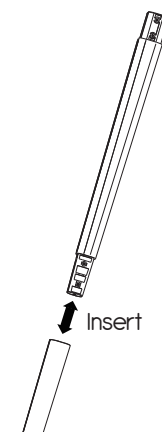

 1. Insert the long legs (with the lower screw hole) into the long feet until they click in place. Insert the long legs (with the high screw hole) into the short feet until they click in place. Fig 1.

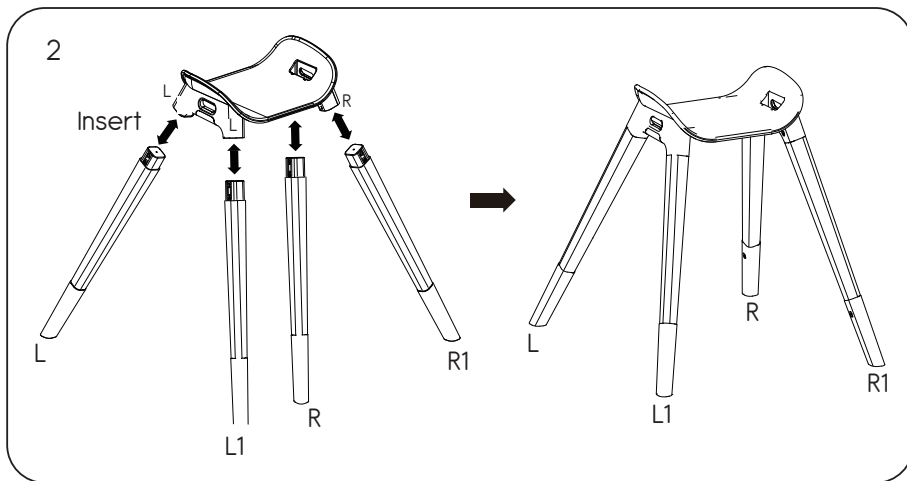


2. Insert the assembled long legs into the corresponding slots on the bottom of the seat panel ensuring that L1 and R1 are both at the front of the seat panel. Fig 2.

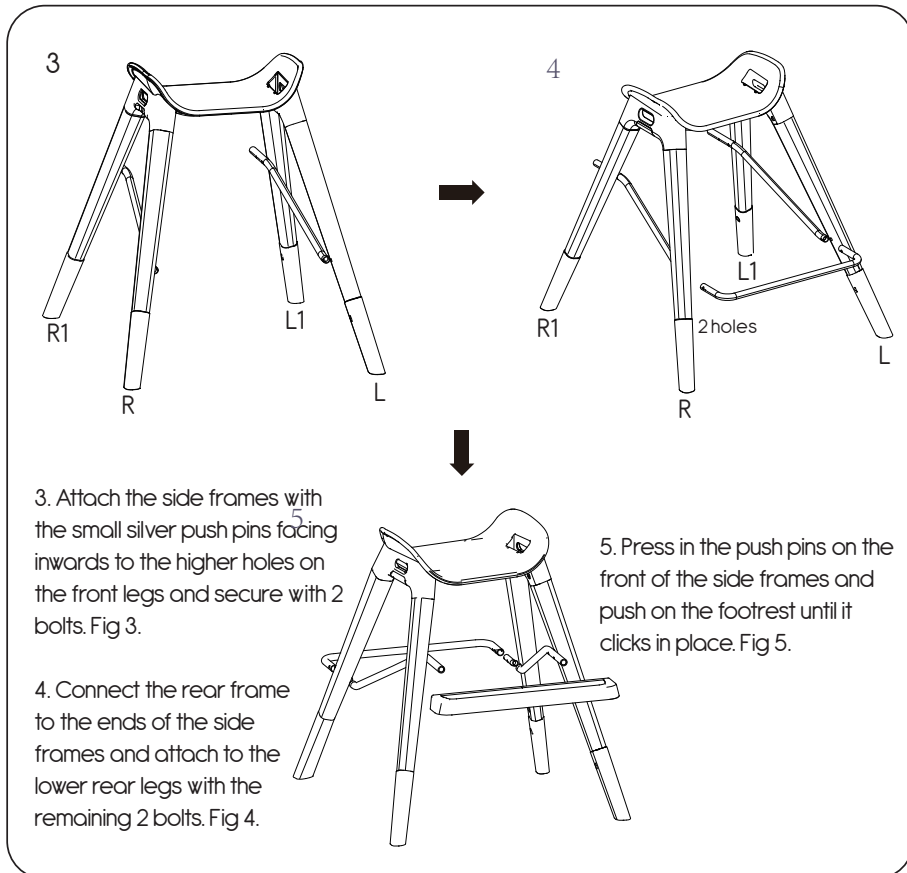

6. Push the seat firmly on to the seat panel until it clicks in place. To remove the seat, push in the buttons through the seat panel and lift the seat upwards. Fig 6.

7. Pull the catches on the underside of the tray to the side and slide it on to the seat. You can choose 3 different tray positions by pulling the catches and sliding the tray back and forth to the desired position. Fig 7. Your highchair will now look like Fig 8.

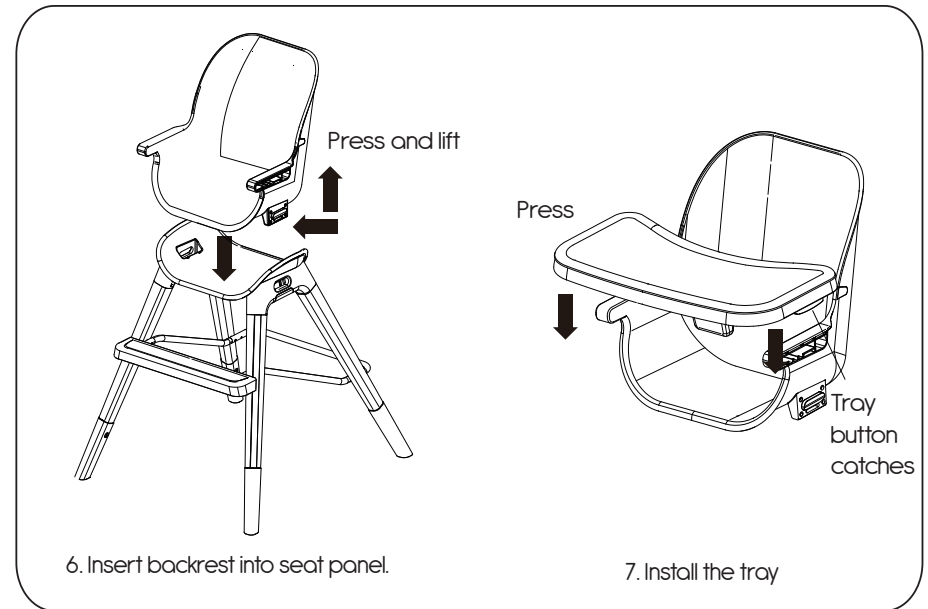



IMPORTANT KEEP FOR FUTURE REFERENCE

Read these instructions carefully before use and keep them for future reference.


Your child's safety may be affected if you do not follow these instructions.

Instruction Leaflet

Feed Me Combi

4in1

Highchair, Lo Chair, Booster Seat, and Stool

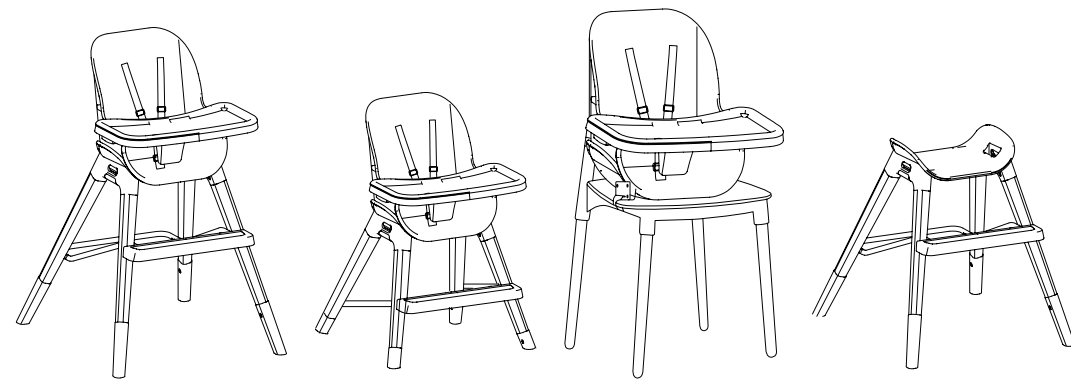


Tested to:

BS EN 14988:2017+A1: 2020 / BS EN 16120 + A2: 2012: 2016 / BS EN 17191: 2021

Customer Care Line: 01454 326 568


INSTRUCTIONS FOR LO CHAIR ASSEMBLY

 8

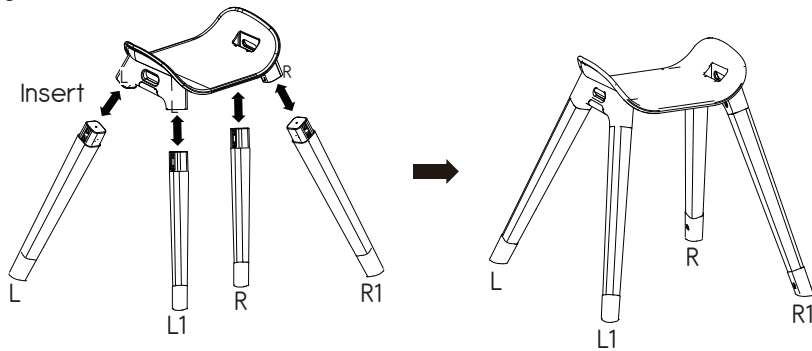


8. Insert the short legs into the corresponding slots on the bottom of the seat panel ensuring that L1 and R1 are both at the front of the seat panel. Fig 8.

 9

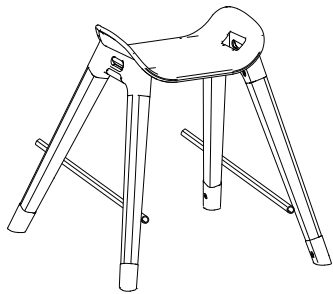


10

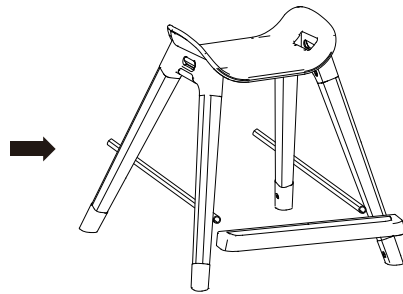 


9. Attach the straight side frames with the silver push pins facing inward to the legs and secure with the 4 bolts. Fig 9.

10. Press in the push pins on the front of the frames and push on the footrest until it clicks in place. Fig 10.

 
11

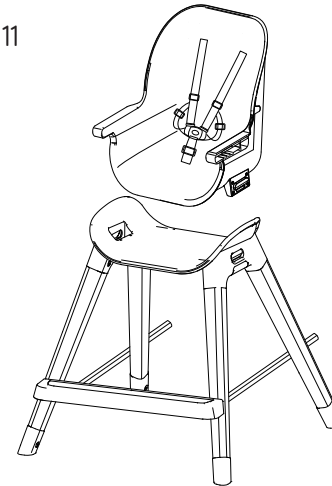

12

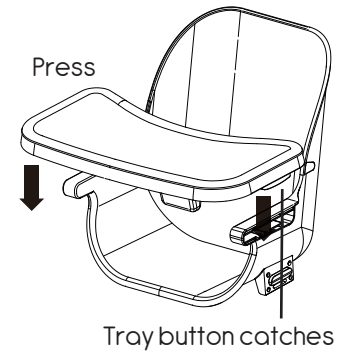 

12A

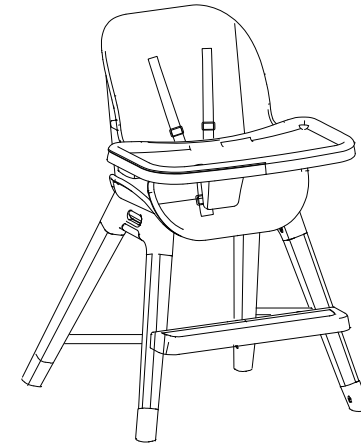 

11. Push the seat firmly on to the seat panel until it clicks in place. To remove the seat, push in the buttons through the seat panel and lift the seat upwards. Fig 11.

12. Pull the catches on the underside of the tray to the side and slide it on to the seat. You can choose 3 different tray positions by pulling the catches and sliding the tray back and forth to the desired position. Fig 12. Your highchair will now look like fig 12A.

INSTRUCTIONS FOR BOOSTER ASSEMBLY

Belt installation on the bottom of the seat.

Bottom of the seat.



13



Using the belts provided, thread through the slots on bottom of the seat.

Place the booster on to the adult chair.


14

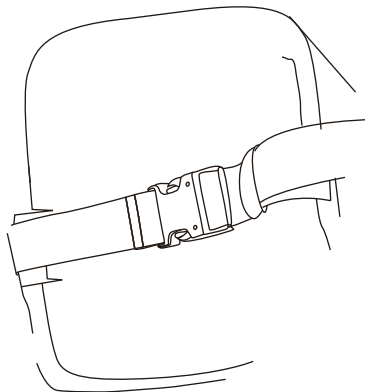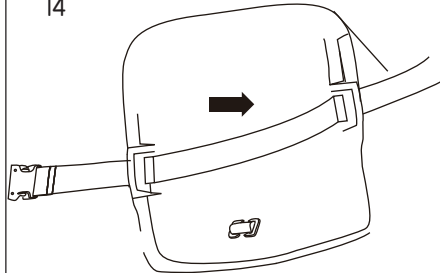

Wrap the seat strap around the seat frame of the chair and connect the buckle together and pull as tight as possible to take up any slack. NOTE. Ensure the buckles are not resting against any framework of the adult chair.


Belt installation on the back rest.

Back of the backrest.

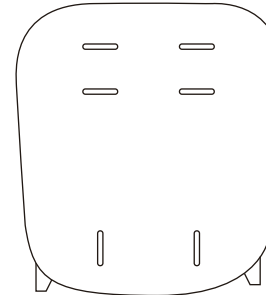


Using the belts provided, thread through the slots on the back of the seat.

15

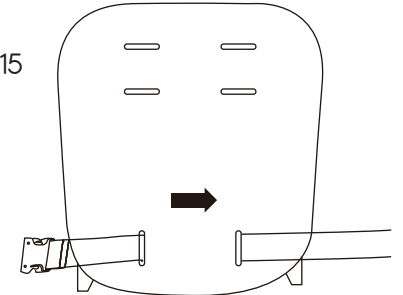


Wrap the seat back strap around the chair, connect the buckle and pull as tight as possible to take up and slack.

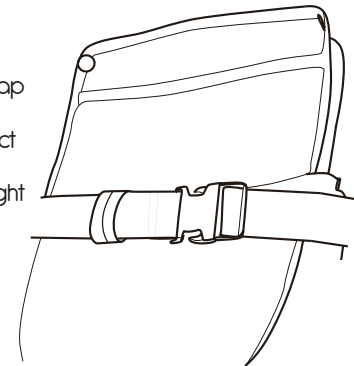

16

NOTE. Ensure the buckles are not resting against any framework of the chair.

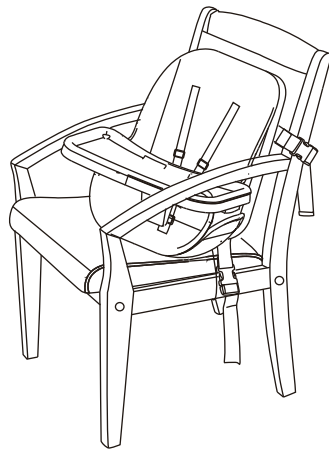


Booster set up finished

ADULT SEAT DIMENSIONS

WARNING :



Please note following dimensions of the adult chair :

1. The width of the adult chair should not be less than 33.8 cm.
2. The depth of the adult chair should not be less than 28 cm.
3. The height of the adult chair backrest should not be less than 42 cm and not over 63 cm.
4. The width of the adult chair backrest should not be less than 40 cm.

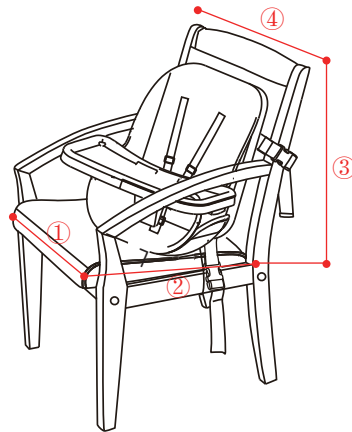

STOOL MODE


17. Remove the seat from the seat panel and insert the 2 seat panel caps. Fig 17.

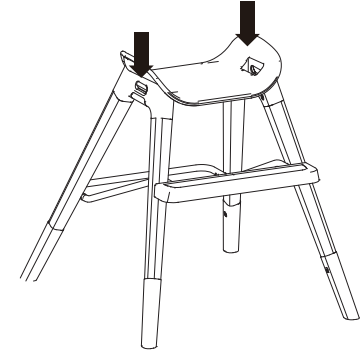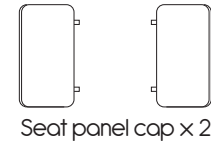

HARNESS INFORMATION

18. To secure and adjust the harness. Slide the waist harness (A) in to the shoulder strap (B) and then push in to the central buckle housing (C). Use the sliders on the harness to achieve a snug and comfortable fit. To release the buckles simply push the button in the centre of the buckle housing. Fig 18.

IMPORTANT! Always use the restraint system.

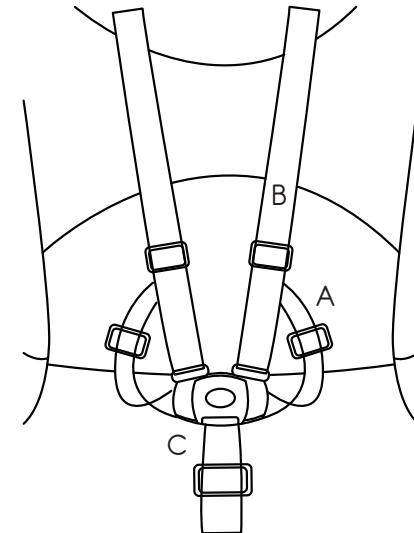

Highchair Mode Safety Information

General care:

The correct use and maintenance of this high chair is essential.

Always ensure the high chair is stored in a dry place to prevent mould or mildew developing.

Avoid leaving your high chair in direct sunlight for prolonged periods of time as this may cause premature fading of colours.

Cleaning:

Metal parts may be cleaned with a damp cloth and wiped dry with a soft cloth.

Clean the harness with a mild detergent solution. Rinse and wipe dry.

Clean plastic parts with a mild detergent solution. Rinse and wipe dry.

The seat cover should be cleaned with a mild detergent solution. Do not submerge in water. Rinse and wipe dry. Do not use abrasive cleaners or bleach.

The flexi feeding tray can be removed and cleaned in the dishwasher.

Maintenance:

Check that nothing is broken, torn or missing and that no sharp edges have been exposed. Stop using the highchair immediately if any are found.

Inspect all studs, nuts and screws for tightness. Check that all straps and harness attachment points are in good working order.

Do not use replacement parts other than those approved by the manufacturer or distributor. Failure to do this may invalidate your warranty.

Safety Warnings:

WARNING: Your child's safety is your responsibility.

WARNING: Do not leave the child unattended.

WARNING: Do not use the high chair unless all components are correctly fitted and adjusted.

WARNING: Be aware of the risk of open fire and other sources of strong heat, such as electric bar fires, gas fires etc. in the vicinity of the highchair. Never place the highchair near these items.

Falling hazard: Prevent your child from climbing on the product.

Be aware of the risk of tilting when your child can push its feet against a table or any other structure.

Keep children away when unfolding and folding the product to avoid injury.

Do not use for a child weighing more than 15 kgs.

Only suitable for children who can sit unaided.

Always use the 5 point harness provided. Ensure that it is correctly fitted and adjusted before each use.

Adult assembly required. Always ensure that the high chair has been correctly assembled and that all locking devices have engaged before placing your child in the high chair.

Ensure that all parts of your child's body are clear of the high chair when assembling, folding or making adjustments.

Do not allow other children to play with this high chair. It is not a toy. Store safely out of reach when not in use.

Never carry the high chair when the child is in it.

Please lift your child in and out of the highchair. Do not allow children to stand on the footrest (where provided) and seat or to climb in and out of the high chair.

Only use the high chair on a level floor surface.

Never add accessories or fittings that have not been approved by the manufacturer.

This product complies with BS EN 14988:2017+A1:2020

Booster Seat Mode Safety Information

General care:

The correct use and maintenance of this booster seat is essential.

Position the adult chair with the chair mounted seat placed in a position where the child is not able to use its feet to push against the table or any other structure as this can cause the adult chair supporting the chair mounted seat to tip over.

Maintenance:

Check that nothing is broken, torn or missing and that no sharp edges have been exposed. Stop using the booster seat immediately if any are found.

Check that all straps and harness attachment points are in good working order.

Always use the restraint system and the chair attachment system.

Always check the security and the stability of the chair mounted seat before use.

Safety Warnings:

WARNING: Your child's safety is your responsibility.

WARNING: Never leave the child unattended.

This product is intended for children able to sit unaided (minimum 6 months) and up to 36 months or a maximum weight of 15 kg.

Do not use until your baby can support their own head.

Do not place the seat near strong heat sources or in direct strong sunlight.

Do not place or position the seat near any item which could present a danger of suffocation, strangulation, e.g. strings, blind/curtain cords, etc or falling objects.

Never carry the booster seat when the child is in it.

Always use the restraint system and ensure it is correctly fitted.

Always check the security and the stability of the product on the adult chair before use.

Prevent falls. Never use on any uneven or elevated surfaces e.g. tables or counter tops.

Always use the chair attachment system and ensure it is correctly fitted before use.

Prevent serious injury or death. Do not use in a motor vehicle.

Do not use in water or as a bath seat.

Do not use this product on stools or benches.

Complies with BS EN 16120 : 2012 + A2 : 2016

Toddler Seat Mode Safety Information

This product is intended for children able to sit unaided (minimum 6 months) and up to 36 months or a maximum weight of 15 kg. The Toddler Chair Mode is not suitable for a baby below 3 years old.

DONOT place this product near a window as it can be used as a step by the child and cause the child to fall out of the window.

Be aware of the risk of open fires and other sources of strong heat in the vicinity of the product.

DONOT place this product near a window where cords from blinds or curtains could strangle a child.

Complies with BS EN 17191:2021

For all technical queries please call:
01454 326 568

Imported by:

The Red Kite Baby Co Ltd
35 Lavenham Road
Beeches Industrial Estate
Yate
Bristol
BS37 5QX, UK.